

Important Note



For best results, use VidaMount VESA brackets (from VidaBox) for this enclosure. It has been specifically fitted to work with this item.

Other VESA mounting hardware can only be used after carefully checking the VESA mount screw length (Step F). Too long a screw will crush and damage the iPad!

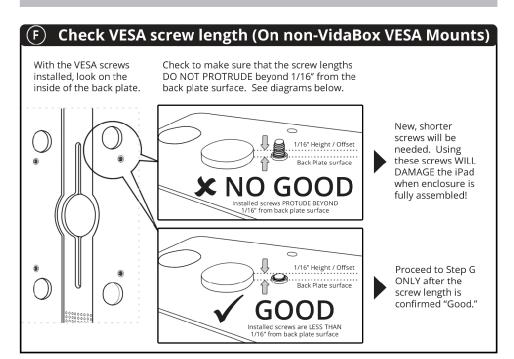

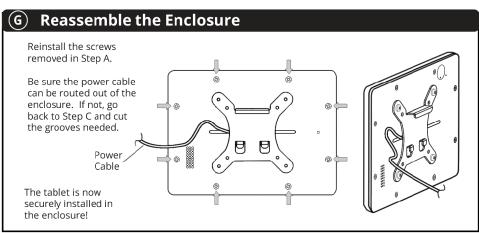




Plainview, NY 11803 USA

Toll-free US: (844) 4-KIOSKS Worldwide: +1 516-499-5050 Australia: +61 1300 44 VIDA EU/UK: +44 333 444 VIDA

INSTALLATION GUIDE

VidaMount VESA Tablet Enclosure For Microsoft Surface Pro 7 (+), Pro 6, Pro 5 (2017) & Pro 4 Tablets VB_VESA_SPRO4

Designed to securely enclose Microsoft Surface Pro 7 (+),
Pro 6, Pro 5 (2017) & Pro 4 tablets
Fits Microsoft Surface Pro 7 (+), Pro 6, Pro 5 (2017)
& Pro 4 tablets ONLY
Compatible with VESA 100x100 mounts

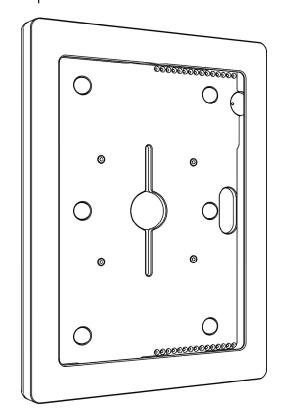

(Tablets are shown for illustrative purposes & not included)

Installation Instructions

VidaMount VESA Tablet Enclosure -Microsoft Surface Pro 7 (+), Pro 6, Pro 5 (2017) & Pro 4


Important Note



For best results, use VidaMount VESA brackets (from VidaBox) for this enclosure. It has been specifically fitted to work with this item.

Other VESA mounting hardware can only be used after carefully checking the VESA mount screw length (Step F). Too long a screw will crush and damage the tablet!

Component Checklist

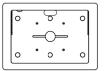

Surface Pro 7 (+), Pro 6, Pro 5 (2017) & Pro 4 Resin Enclosure (Already assembled)

TOOLS YOU'LL NEED (not included)







Knife / Box Cutter (OPTIONAL)


Disassembling the Enclosure

Remove the flat-head screws as shown. Set aside the loose hardware carefully.

We will need this hardware again ater.

We now have (2) pieces: A. The front face plate


B. The back plate

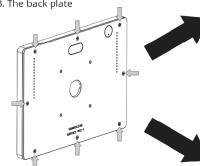


Tablet Resin Enclosure **REAR VIEW**

IMPORTANT: Diagrams are generalized. Your exact enclosure may appear slightly different!

A. FRONT FACE PLATE

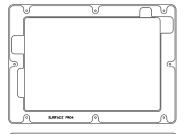

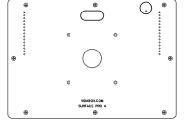

B. BACK PLATE

Optional: Remove Knockout (If needed) For Power Button / Rear Camera Exposure




Using the blunt end of the screwdriver, press down on the circular knockout, as shown.

This will pop out the power button / rear camera access panel.

Optional: Cut Wiring Grooves (If needed) Grooves OPTIONAL: Remove only if necessary. can be cut

If using a VESA mount where the center wiring hole is blocked, use a knife / box cutter, and cut out the grooves.

This will allow the tablet's wires to be routed properly.

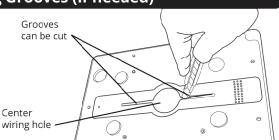

Install Tablet into Front Face Plate Power Orient the tablet properly and install it Button into the front face plate as shown. Port Be sure that the power button, headphone out, and USB cable ports line up properly. Micro USB Cable \Box Connect the USB cable now. USB Cable & It will need to be routed Headphone through the center hole in output Port SURFACE PRO4 the next steps.

