

## **Important Note**



For best results, use VidaMount VESA brackets (from VidaBox) for this enclosure. It has been specifically fitted to work with this item.

Other VESA mounting hardware can only be used after carefully checking the VESA mount screw length (Step F). Too long a screw will crush and damage the iPad!

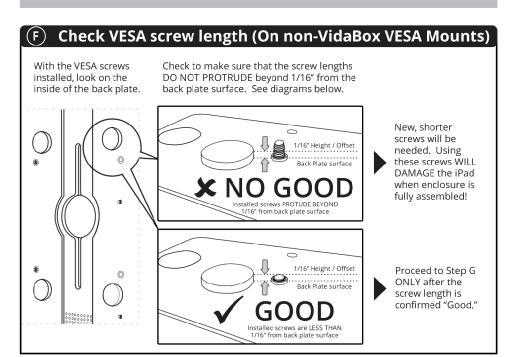

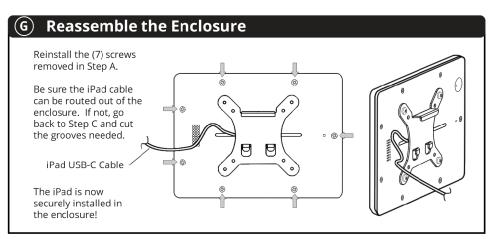



Plainview, NY 11803 USA


Toll-free US: (844) 4-KIOSKS Worldwide: +1 516-499-5050 Australia: +61 1300 44 VIDA EU/UK: +44 333 444 VIDA

# **INSTALLATION GUIDE**

VidaMount VESA Tablet Enclosure w. Rear Camera Exposed For iPad Air 4 & Pro 11" 1/2 Tablets

# VB\_VESA\_IPRO2G110\_RCE

Designed to securely enclose iPad Air 4 & Pro 11" 1/2 tablets and exposes the rear camera. Fits iPad Air 4 & Pro 11" 1/2 tablets ONLY Compatible with VESA 100x100 mounts

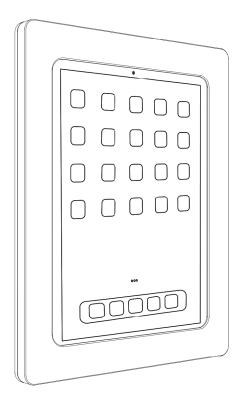

(iPad is shown for illustrative purposes & not included)

# **Installation Instructions**

#### VidaMount VESA Enclosure - iPad Air 4 & Pro 11" 1/2

### **Important Note**



For best results, use VidaMount VESA brackets (from VidaBox) for this enclosure. It has been specifically fitted to work with this item.

Other VESA mounting hardware can only be used after carefully checking the VESA mount screw length (Step F). Too long a screw will crush and damage the iPad!

## **Component Checklist**



iPad Resin Enclosure (Already assembled)

TOOLS YOU'LL NEED (not included)



Phillips head Screwdriver



Knife / Box Cutter (OPTIONAL)

## **Disassembling the Enclosure**

Remove the flat-head screws as shown. Set aside the loose hardware carefully.


We will need this hardware again ater.


We now have (2) pieces: A. The front face plate B. The back plate

IMPORTANT: Diagrams are generalized for iPads your exact enclosure may appear slightly different!

iPad Resin Enclosure REAR VIEW


A. FRONT FACE PLATE

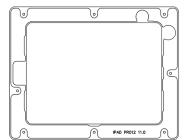

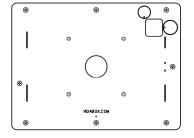

B. BACK PLATE

## Optional: Remove Power Button Knockout (If needed)

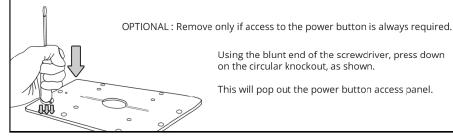

wires to be routed properly.

Using the blunt end of the screwdriver, press down on the circular knockout, as shown.

This will pop out the power button access panel.

#### **Optional: Cut Wiring Grooves (If needed)** Grooves OPTIONAL: Remove only if necessary. can be cut If using a VESA mount where the center wiring hole is blocked, use a knife / box cutter, and cut out the grooves. This will allow the tablet's Center

wiring hole -

