


INSTALLATION GUIDE

Fixed VESA Floor Stand V2

VB_MNT_FFS2

Ideal for VidaMount VESA Tablet Enclosures

VESA 100x100 & 75x75 Compatible

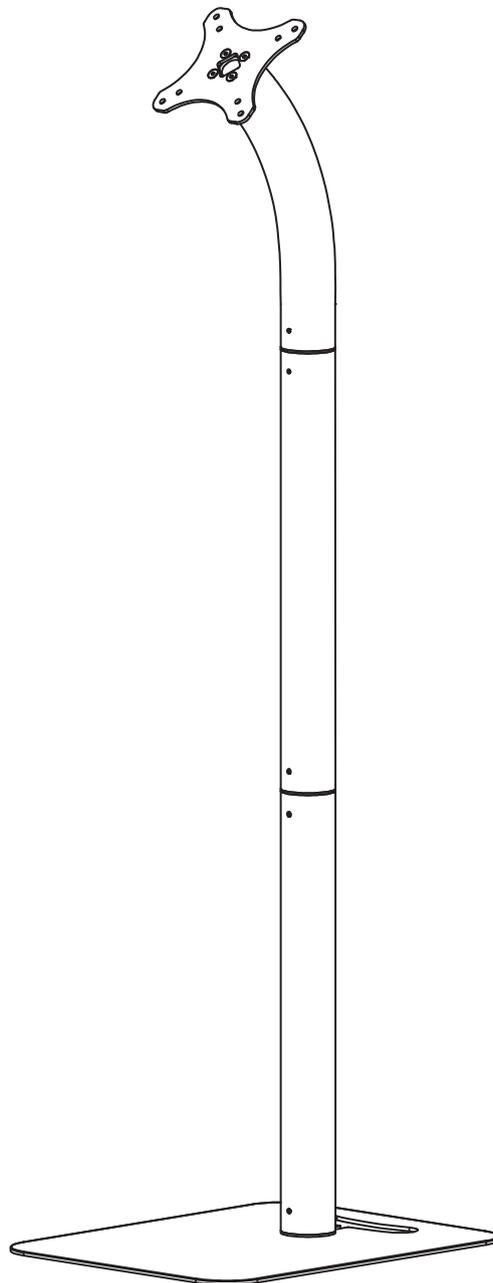

Installation Instructions

Fixed Floor Stand V2 : VESA Compatible

Important Note:

- If charging is desired, please prepare the extension cable and / or charging solution for the VESA tablet first. Installing the charging solution / extension cable will be easier to do now rather than later.
- VESA : 75 x 75 (3" x 3") and 100 x 100 (4" x 4") compatible.


Component Checklist:



Using this with a VidaMount Tablet Enclosure?

Before proceeding: Install your tablet & charging cable into the enclosure FIRST - as per the included instructions.

FLOOR STAND SECTIONS

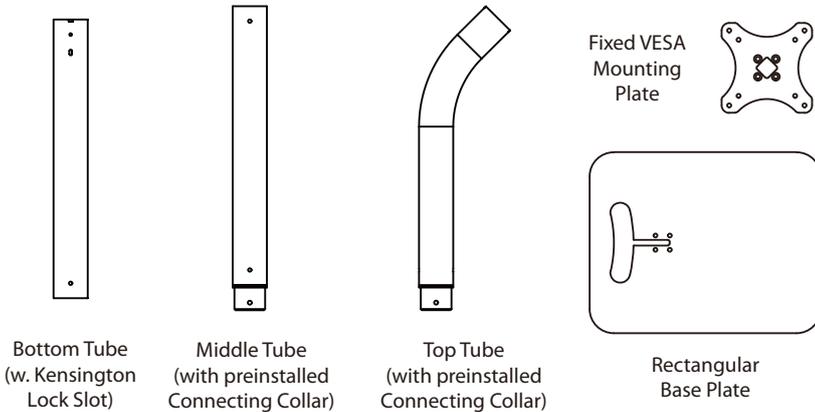

SCREWS & HARDWARE



[Step 3-A]
(4) M5X8 Hex Countersink Screws



3mm Hex Wrench (For Hex Screws & Set Screws)



[Step 3-D]
(4) M5X12 Hex Countersink Screws



(4) M4X8 Phillips Pan Head Screws




(6) Self-Adhesive Rubber Feet for Base Plate


1 Install/Route USB Cable

IMPORTANT: If we are using the VESA mounted device with a USB cable, run the USB cable through the floor stand's central column, while the pieces are still disassembled.

Trying to fish the cable through later will be far more difficult!

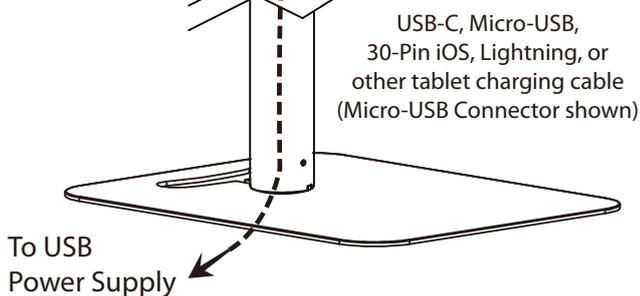

2 Install Rubber Feet

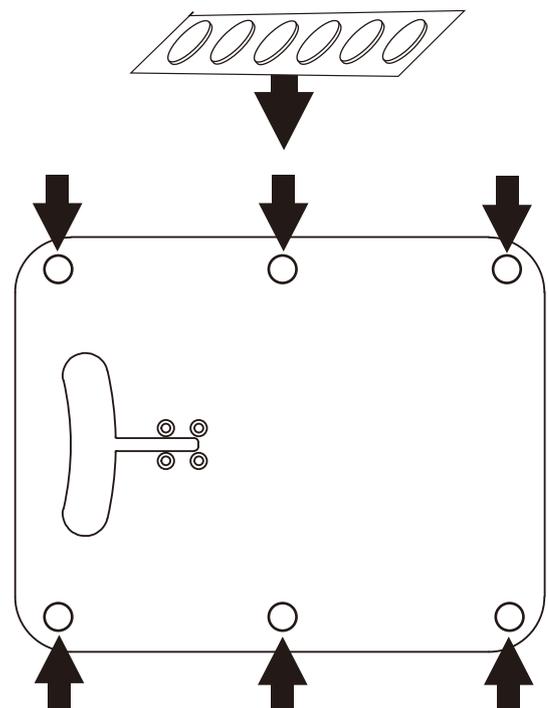

3 Assemble the Floor Stand

M5X8 Hex
Countersunk
Screws


VESA Plate

Top Tube
(with preinstalled
connecting collar)

Middle Tube
(with preinstalled
connecting collar)


Bottom Tube

Rectangular
Base Plate

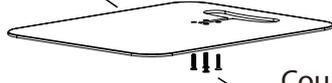

(4) M5X12 Hex
Countersunk Screws

[3-A]
Tighten with
3mm Hex Wrench

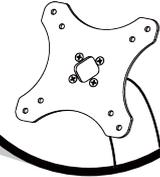


[3-B, 3-C] Tighten
COUNTER-
CLOCKWISE
with included
3mm Hex
Wrench

[3-D] Tighten
CLOCKWISE
with included
3mm Hex
Wrench

4 Mount the VESA Compatible Device

Using the (4) M4X8 Phillips Pan Head
Screws, mount the VESA compatible device
onto the floor stand as shown.

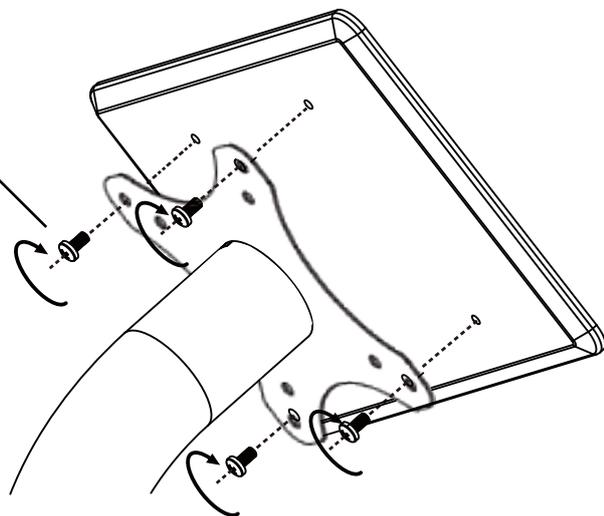


5 Set VESA Device to Portrait or Landscape

Choosing between Portrait and Landscape mode, rotate the VESA mounted device to its ideal position.

? Which position is better for your setup?
LANDSCAPE or **PORTRAIT**?

Hint: The optimal position is usually determined by the app or software being run on the device.

Some apps are optimized for landscape, while other apps are optimized for portrait mode.

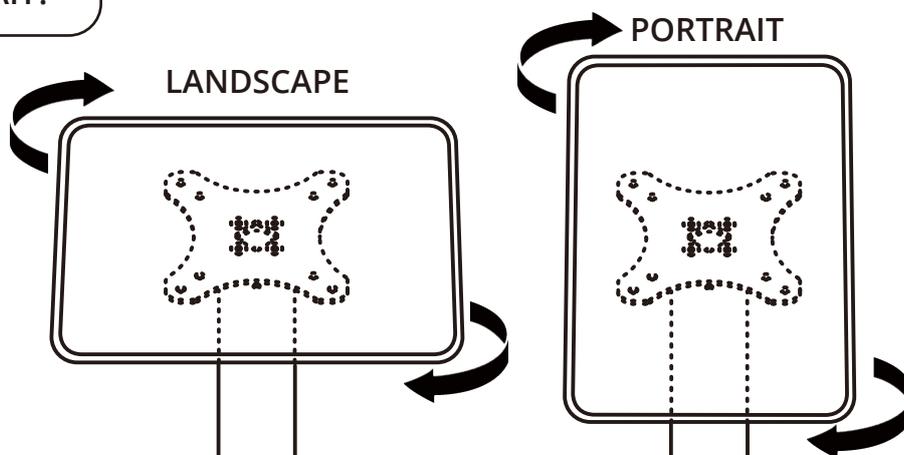


6 Affix VESA Device to Prevent Rotation

To prevent unintended adjustment between Portrait vs Landscape mode:

- A. Locate the larger set screw hole behind the VESA mounted device.
- B. Using the included 3mm Hex wrench, turn it **CLOCKWISE** to **TIGHTEN**.
(Hint: To allow re-adjustment, turn it **COUNTER-CLOCKWISE** to **LOOSEN**)

We STRONGLY recommend setting the VESA device to a fixed position by tightening the set screw.

Reason: Tightening this will prevent potential damage to the USB cable inside of the floor stand.

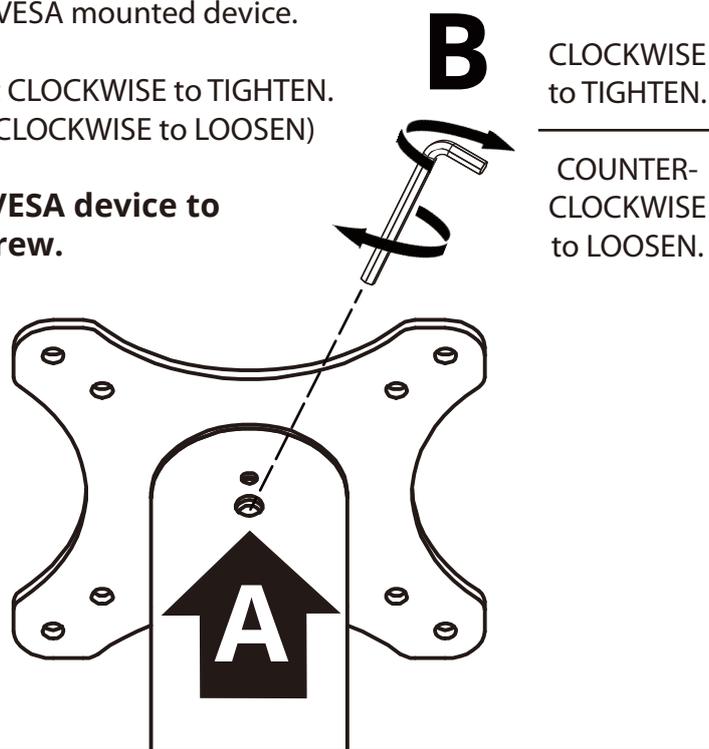

125 Newtown Rd, Ste 100
Plainview, NY 11803 USA

Toll-free US: (844) 4-KIOSKS
Worldwide: +1 516-499-5050
Australia: +61 1300 44 VIDA
EU/UK: +44 333 444 VIDA