



Installation Instructions



Fixed SLIM Wall Mount Permanent Adhesive Kit Ideal for Glass Surfaces

This kit includes:

- (1) Alcohol Wipe
- (2) 1" x 4.5" LONG Permanent Adhesive Strips
- (2) 3/4" x 1.75" SHORT Permanent Adhesive Strips

1. Using the alcohol wipe, clean the glass surface where we will be mounting the wall plate. Be sure the surface is free of dirty, grime, or other debris to ensure a permanent installation.

Note: Take the time & effort to properly clean the glass surface. **Any contaminants will compromise the kit's long-term adhesion strength.** Cleaning beyond using the supplied alcohol wipe may be required to ensure the surface is truly clean.
2. Next, wipe the back of the Wall Plate that will be mounted. (Shown on lower right)
Be sure the surface is free of dirty, grime, or other debris to ensure a permanent installation.
3. Apply the (4) strips onto the back of the wall plate. (Same surface as step 2) Use the LONG strips on top & bottom – the SHORT strips on the left and right edges. DO NOT REMOVE the backing tape yet.
4. Assemble the enclosure to the VESA plate, then mount it onto the wall plate **WITHOUT REMOVING THE BACKING TAPE.** Place it on the glass wall at your ideal, final position.
5. Be sure this position is satisfactory BEFORE proceeding. **WARNING: ONCE THE STRIP IS APPLIED, it will be EXTREMELY DIFFICULT TO REMOVE.**
6. Once you're satisfied with the placement, we can now remove the backing tape. Adhere the mount directly onto the glass wall. **PRESS AS HARD AS POSSIBLE.**
7. View the adhesive strips from the back. **LOOK FOR AIR POCKETS / BUBBLES. If present, the adhesive strip will appear as an "off color" – we must keep pressing hard until the bubbles are forced out.**
8. Repeat Step 7 to be 100% sure there are no air bubbles. **Air bubbles are the biggest cause of bonding failure.**
9. Setup is now complete!

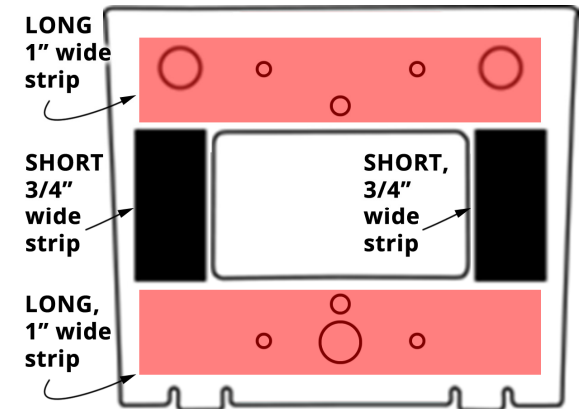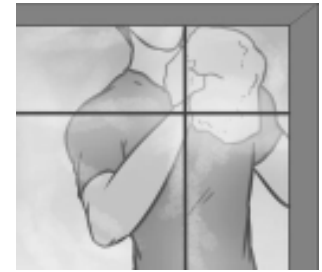

Installation Instructions

Fixed SLIM Wall Mount Permanent Adhesive Kit Ideal for Glass Surfaces

This kit includes:

- (1) Alcohol Wipe
- (2) 1" x 4.5" LONG Permanent Adhesive Strips
- (2) 3/4" x 1.75" SHORT Permanent Adhesive Strips

1. Using the alcohol wipe, clean the glass surface where we will be mounting the wall plate. Be sure the surface is free of dirty, grime, or other debris to ensure a permanent installation.

Note: Take the time & effort to properly clean the glass surface. **Any contaminants will compromise the kit's long-term adhesion strength.** Cleaning beyond using the supplied alcohol wipe may be required to ensure the surface is truly clean.
2. Next, wipe the back of the Wall Plate that will be mounted. (Shown on lower right)
Be sure the surface is free of dirty, grime, or other debris to ensure a permanent installation.
3. Apply the (4) strips onto the back of the wall plate. (Same surface as step 2) Use the LONG strips on top & bottom – the SHORT strips on the left and right edges. DO NOT REMOVE the backing tape yet.
4. Assemble the enclosure to the VESA plate, then mount it onto the wall plate **WITHOUT REMOVING THE BACKING TAPE.** Place it on the glass wall at your ideal, final position.
5. Be sure this position is satisfactory BEFORE proceeding. **WARNING: ONCE THE STRIP IS APPLIED, it will be EXTREMELY DIFFICULT TO REMOVE.**
6. Once you're satisfied with the placement, we can now remove the backing tape. Adhere the mount directly onto the glass wall. **PRESS AS HARD AS POSSIBLE.**
7. View the adhesive strips from the back. **LOOK FOR AIR POCKETS / BUBBLES. If present, the adhesive strip will appear as an "off color" – we must keep pressing hard until the bubbles are forced out.**
8. Repeat Step 7 to be 100% sure there are no air bubbles. **Air bubbles are the biggest cause of bonding failure.**
9. Setup is now complete!

