
INSTALLATION GUIDE

Base Piece for 360 Rotate & Tilt Mount


VB_MNT_BP360

Designed for 360 Rotate & Tilt VidaMounts

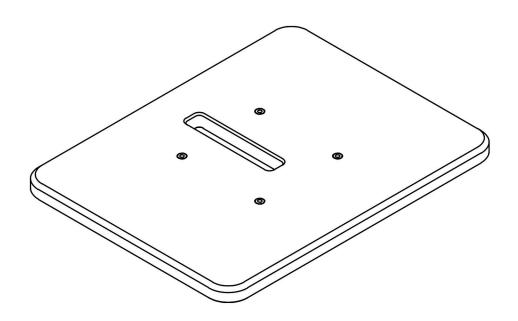


Only Compatible with

VB_VESA_MNT_360TSUR 360 Rotate & Tilt VidaMount (4.5" Tall Version)

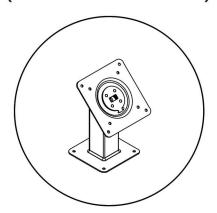

VB_VESA_MNT_360TSUR9
360 Rotate & Tilt VidaMount
(9" Tall Version)

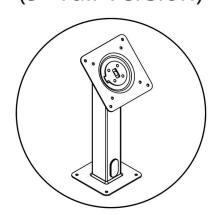


Installation Instructions

Base Piece for 360 Rotate & Tilt VidaMounts



Rectangular Base Piece for 360 Rotate & Tilt Mount

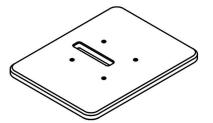


(4) M4 x 8mm Short Pan Head Screws



A Prepare Work Surface

Start with a clear table top surface.


Lay the Base Piece on the table, with feet down, as shown on right.

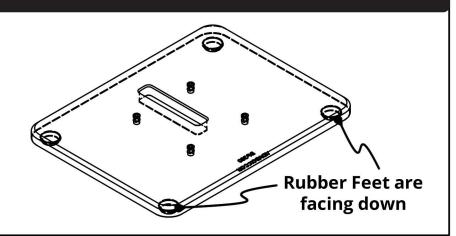

B Align 360 VidaMount onto Base Piece's Screw Holes


[B1] Place the 360 Rotate & Tilt Stand on top of the Base Piece.

[B2] Align the (4) holes on the bottom flange of the 360 Stand with the (4) holes on the top of the base piece.

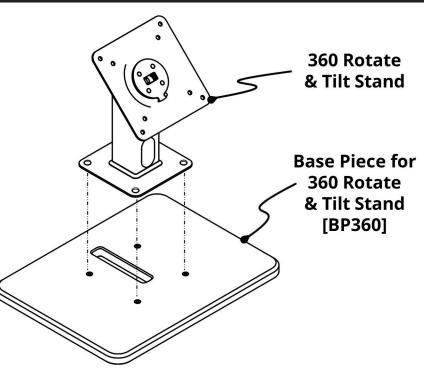

© Affix the 360 Rotate & Tilt Stand onto the Base Piece

Install the M4 x 8mm pan head screws into each of the (4) holes (see Black Arrows) as shown on the right.

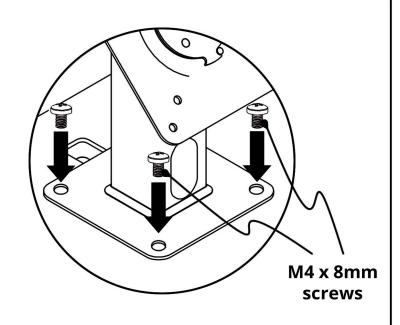

(D) Route USB Cables

To avoid crushing the cable, if we are using:

- [1] Premium VidaPower cables [or]
- [2] USB cables thicker than Ø0.135" [3.5mm]


...we recommend routing & exiting the wire above the Base Piece (instead of below).

Below the Base Piece [D-3A.1]If the cable is sufficiently thin, we can leave the cable under the Base Piece. Proceed to [Step E]



[D-3B.1] Instead of passing the cable under the Base Piece, feed it through the rounded rectangular slot (Cable Exit Slot) on the back of the Base Piece.

[D-3B.2] The cable can rest without any compression forces applied, ensuring cable longevity.

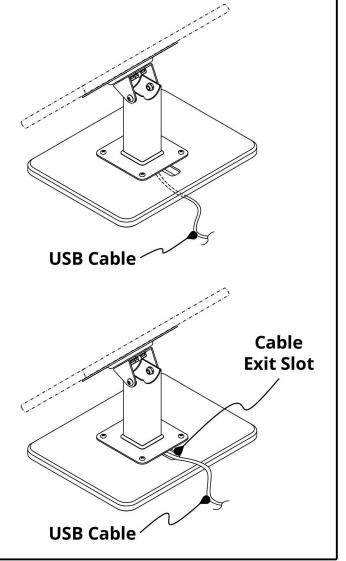



E Plug in Charging Cable & Complete Installation

[E1] Connect the exiting charging cable into a nearby power source.

[E2] Rotate your VESA device to the desired display position (Portrait or Landscape).

[E3] Your installation is now complete - Enjoy!

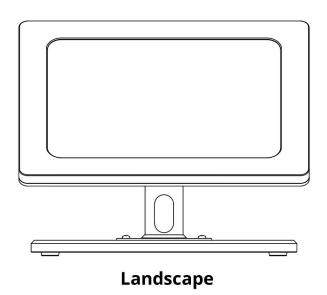

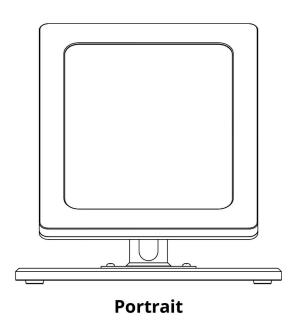

v250424



Toll-free US: (844) 4-KIOSKS Worldwide: +1 516-499-5050

Australia: +61 1300 44 VIDA

EU/UK: +44 333 444 VIDA